


80037 Contemporary Workcenter Assembly Instructions


HARDWARE

- A** Allen Wrench
M5 x1
- B** JCBB
M8 x 50mm x12
- C** Spanner
14.3 x1
- D** Hooks
x6

1

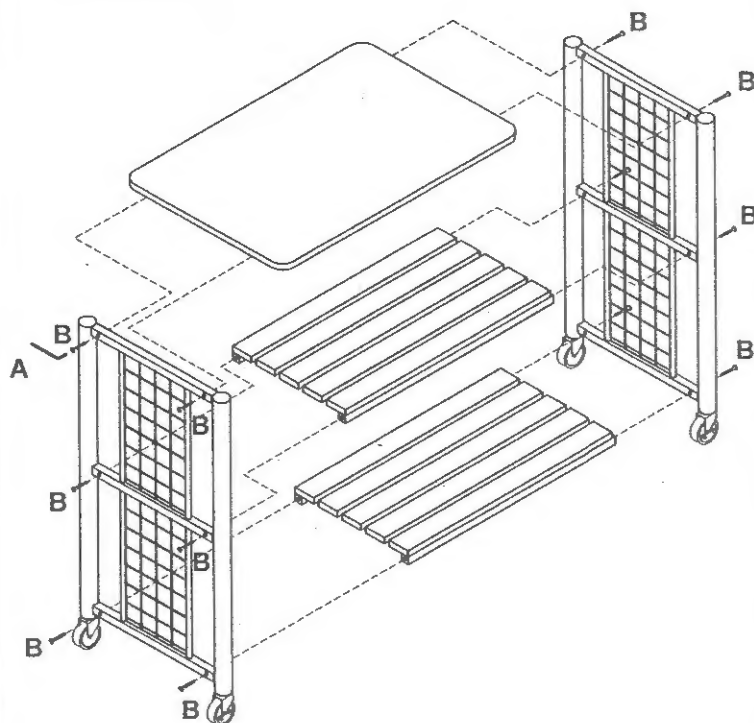

2

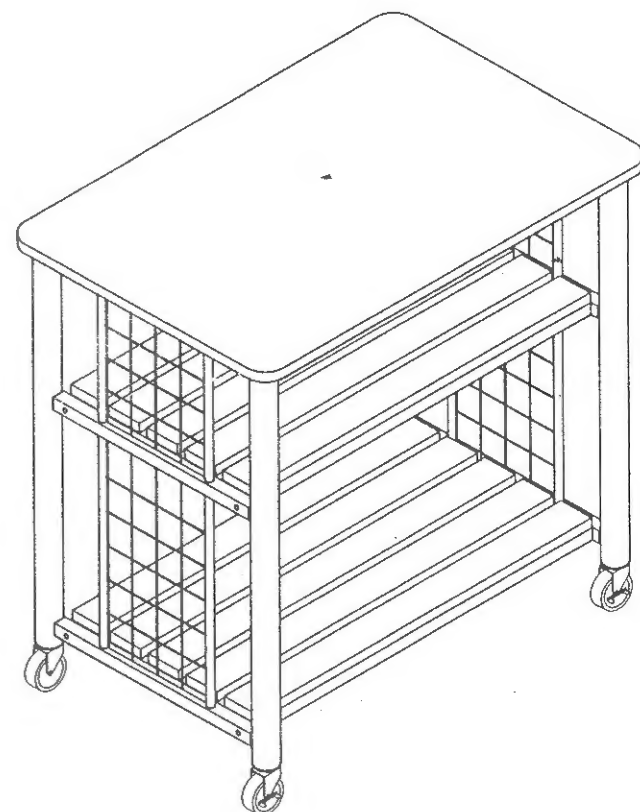

IMPORTANT! DO NOT TIGHTEN SCREWS OR BOLTS UNTIL COMPLETELY ASSEMBLED!!

Customer Service 0607 - 652 7321